


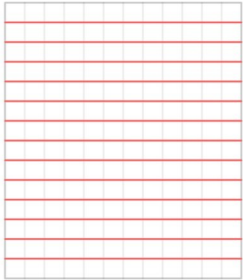



1 Rip Seams. Rip out all short seams on both blankets.



2 Prep Ribbons. Cut 26 4" grosgrain ribbons. Flame-seal the ends with a candle.



3 Make "Pollux". Snap ribbons onto blanket at the top of every seam, 13 on each side.

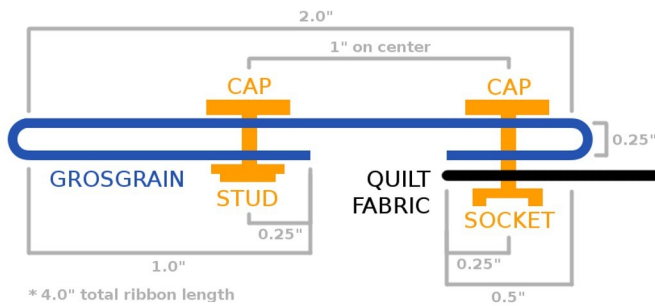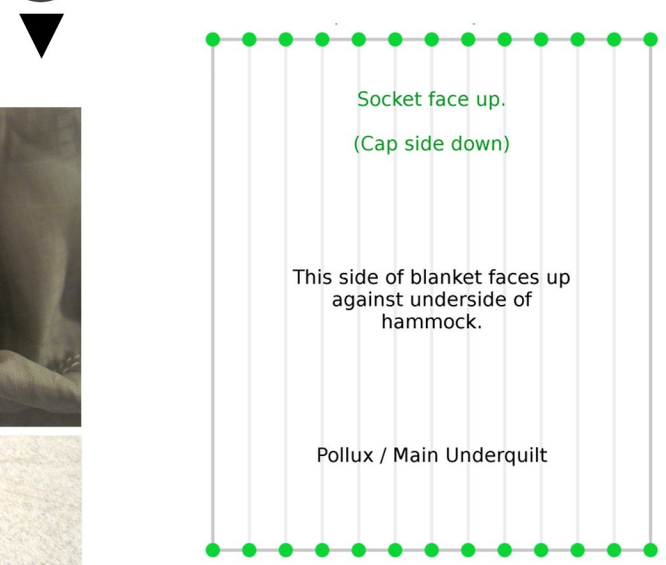


* 4.0" total ribbon length



4 Make Clews. 2 nails in a board 21" apart makes a jig. Put caribiner on first nail. Slipknot shockcord onto caribiner with 8" tail. Wrap 13 times between nails. Whip clew together using two tail ends. Tie a short cord on the ring to attach to hammock.



5 Make "Castor". Add snaps using guide below.

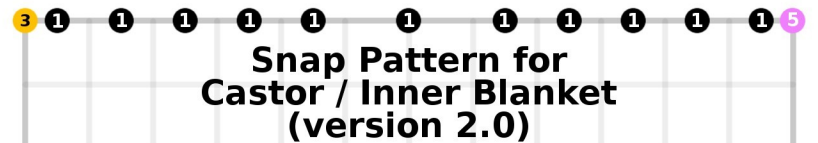

1 (Black) = Socket face up, color 1

2 (Red) = Stud face down, color 2

3 (Orange) = Stud face up, color 2

4 (Green) Socket face up, color 2

5 (Purple) Socket face down, color 2

* Optional: using two different snap colors can help differentiate between those used to connect the two blankets and those used for "top quilt mode"

This side up.

